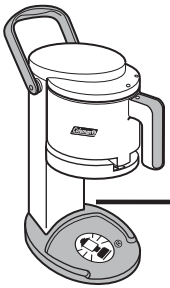

Coleman

On-The-Go-Sno™ Portable Ice Shaver

Model No. 841-708

Operating Instructions

• 4 - D size Batteries Required

Before operating this unit, please read these instructions completely.

Thank you for purchasing the Coleman® On-The-Go-Sno™ Portable Ice Shaver. Before operating the unit, please read and follow these instructions completely. Please retain the instructions for future reference.

TABLE OF CONTENTS

■IMPORTANT SAFETY INSTRUCTIONS ---------- 2
■PARTS IDENTIFICATION AND FUNCTION ---------- 4
■HOW TO USE ---------- 5
■MAINTENANCE ---------- 8
■SPECIFICATIONS ---------- 9
■TROUBLESHOOTING ---------- 9
■WARRANTY ---------- 10

Printed in China 841-050 (8/29/05)

IMPORTANT SAFETY INSTRUCTIONS

This product is not intended for use by children.

⚠ WARNING –

To avoid risk of fire or burns, follow these instructions.

- **If battery electrolyte comes into contact with the eyes, do not rub your eyes; instead, thoroughly flush the eyes with a large quantity of clean water. Immediately seek medical attention.**

- **Dead batteries should be removed from the appliance.**
  Failure to follow this instruction may result in batteries leaking electrolyte, overheating or exploding.

- **Batteries should not be disassembled or modified.**
- **Do not use rechargeable batteries.**

- **Keep the appliance out of reach of children and infants.**

- **Do not disassemble, repair or modify the appliance.**

⚠ CAUTION –

In order to prevent the user of this product from being injured and prevent the product from being damaged, please follow the safety instructions.

- **Batteries should be positioned properly.**
- **Follow the instructions on the batteries.**
- **Be sure to switch off the appliance after use.**
- **Check the appliance periodically (for operation and battery leaks).**

  Failure to follow this instruction may result in batteries leaking electrolyte, overheating or exploding.

- **Do not use the appliance with hot water over 104˚ F or put it in a dishwasher.**
- **Do not use the appliance near a stove or in direct sunlight.**
- **Do not place the appliance anywhere that may reach a high temperature (e.g. inside a car at the height of summer).**

- **When carrying the appliance, hold the handle on the main body and not the handle of the bowl.**

- **Before cleaning the appliance, remove the batteries.**

- **Do not use new and old batteries together and do not mix battery types.**

  Failure to follow this instruction may result in batteries leaking electrolyte, overheating or exploding.

- **Use the appliance only on a flat surface.**
- **Do not shake the appliance.**
- **Do not drop or hit the appliance.**
- **Do not move the appliance while it is in motion.**
- **Do not remove bowl while appliance is operating.**

- **Do not use the appliance for any purpose other than ice shaving.**
- **Do not put anything other than ice (e.g. a spoon) into the bowl.**
- **Do not use the appliance for more than five consecutive minutes.**
- **Do not touch the cutting blade with your hand because it is sharp and may cause injury.**
- **Do not adjust the screws securing the cutting blade.**

PARTS IDENTIFICATION AND FUNCTION

Names of major parts

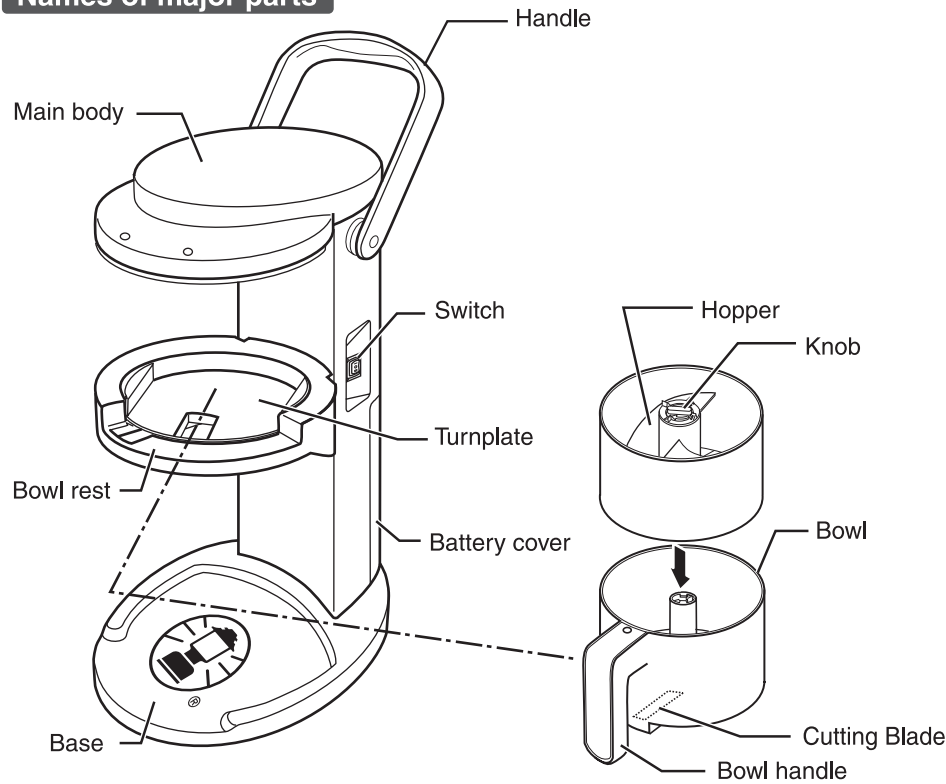

How to insert the batteries

① Remove the battery cover from the main body.
② Insert four D-size batteries into the main body.
③ Snap the battery cover into place.

- ◆ Do not use new and old batteries together and do not mix battery types.
- ◆ Do not reverse the batteries.
- ◆ Alkaline batteries are recommended.

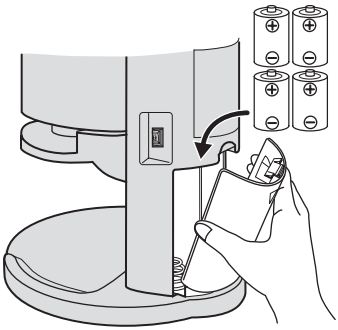

HOW TO USE

How to use

1 Remove the bowl.

① Align the matchmark on the bowl with the matchmark for insertion/ removal on the main body.

② Pull the bowl out of the main body straight along the turnplate.

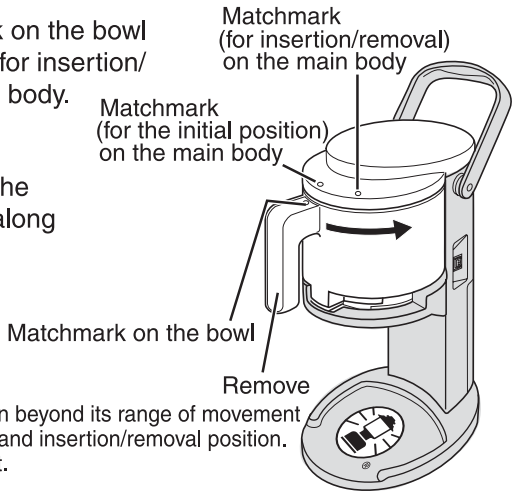

• Do not force the bowl to turn beyond its range of movement between the initial position and insertion/removal position. Appliance failure may result.

2 Put ice in the bowl.

◆ Fill hopper with ice pieces, but do not overfill so pieces protrude above the hopper.

◆ Large ice and odd-shaped ice (e.g. ice pieces stuck together and block ice) may not be shaved. Crush such ice pieces before putting in the hopper.

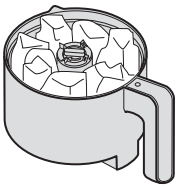

3 Position the bowl.

① Insert the bowl by aligning the matchmarks on the bowl and matchmarks on the main body.

② Turn the bowl so the matchmark on it becomes aligned with the next matchmark (for the initial position).

◆ If the bowl stops turning, do not force it to turn; instead, pull it out once and then turn the hopper slightly. After that, reposition the bowl again.

4 Position a cup on the base to receive the shaved ice.

◆ Adjust its position so that shaved ice will fall into the cup.

5 Flip the switch to the ON position to shave the ice.

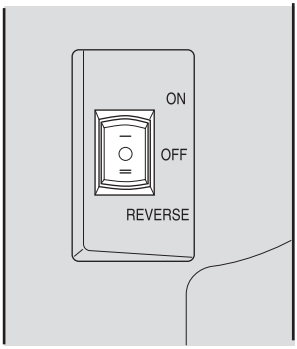

- If the appliance stops halfway through shaving the ice, immediately flip the switch to OFF and perform the reversing operation.
  → Refer to "How to reverse the direction of rotation" (page 7).
- If the appliance stops frequently, replace the batteries.
- When the appliance is shaving the ice, only a little shaved ice may come out. This does not indicate a problem. Change the position of the ice or remove small ice pieces in the bowl and run the appliance again.
- The last two or three pieces of ice may be difficult to shave.
- Do not run the appliance for more than five consecutive minutes in order to protect the motor.

6 Flip the switch to the OFF position to stop shaving the ice.

7 Remove the bowl.

- If there are remaining ice pieces in the bowl, the bowl will sometimes stop turning because the cutting blade digs into the ice. Perform the reversing operation to solve this problem.
  → Refer to "How to reverse the direction of rotation" (page 7).

8 Turn the knob and remove the hopper.

→ Refer to "How to remove the hopper" (page 7).

9 Discard the ice remaining in the bowl.

10 Wipe water off the bowl.

HOW TO USE

How to reverse the direction of rotation

① Align the matchmarks on the bowl (used for initial positioning) and main body.
② Flip the switch to the REVERSE position and leave it there for two or three seconds to rotate the unit in the reverse direction.
③ Flip the switch to the OFF position.

How to mount the turnplate

■ Mount the turnplate right side up paying attention to the orientation of the notch.

◆ The turnplate should not be raised.

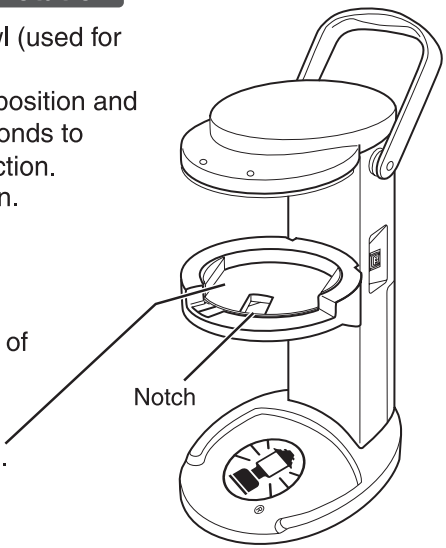

How to remove the hopper

① Remove the bowl from the main body.
② Turn the knob and remove the hopper.

How to position the hopper

① If any ice pieces remain in the bowl, carefully remove them.
② Position the hopper in the bowl.
③ Tighten the knob securely.

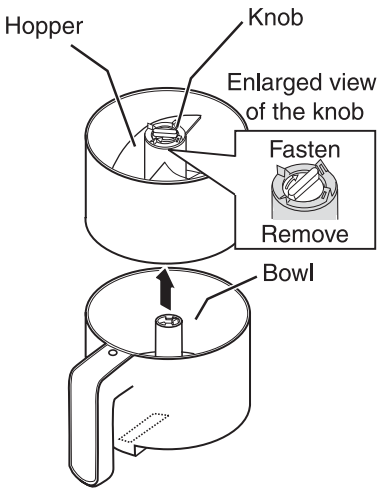

MAINTENANCE

Maintenance

① Remove the batteries.
② Wash the bowl, cutting blade, and hopper with water, wipe them dry and allow to air-dry. Use caution when cleaning the cutting blade.
③ Wipe the main body with a dry cloth or a cloth that is slightly dampened with detergent.

- ◆ Be very careful not to cut yourself on the cutting blade.
- ◆ Never adjust the screws fastening the cutting blade.
- ◆ Prevent any oil from adhering to the cutting blade and plastic parts.
- ◆ Do not use thinner, benzene, alcohol, a scrubbing metallic brush, polishing powder, etc., to clean the appliance - these may harm the appliance.
- ◆ Do not wash the main body with water. Do not submerge the main body in water.
- ◆ Do not use hot water over 104˚ F with the appliance or place in a dishwasher.
- ◆ If the unit stops turning frequently because it becomes snagged on the ice, replace the four D-size alkaline batteries.
- ◆ If the cutting blade continues to snag on the ice after battery replacement, then the cutting blade may be warn. Replace the bowl assembly with a new one.

■ Part name:	Bowl assembly
■ Part No.:	841-1001

Storage

- ■ Store the appliance on a flat surface.
  If stored improperly, the appliance may fall resulting in injury or appliance failure.
- ■ Be sure to flip the switch to the OFF position prior to storage.
- ■ Remove the batteries from the appliance when it is not to be used for an extended period of time.

SPECIFICATIONS/TROUBLESHOOTING

Specifications

Battery operated	4 - D-size Alkaline batteries	**Rated voltage**	DC 6 V
Battery life (at 68 F)	Approx. 90 minutes of operation can produce about 90 cups of shaved ice assuming that one cup of shaved ice weighs 3.53 oz. * This applies when alkaline batteries are used. The value varies depending on battery performance.		
Operating temperature	0 to 40 °C (32 to 104 °F)		
Dimensions	Approx. H 12.09" x W 6.73" x D 8.66"		
Weight	Approx. 4.5 lbs (including alkaline batteries). Weight varies depending on the battery type.		

● Appearance and specifications are subject to change without notice.

Troubleshooting

Condition	Problem / Check point	Solution	Page
The appliance does not operate.	■ The batteries are exhausted.	→ Replace the batteries.	4
	■ The batteries are in a reversed orientation.	→ Insert the batteries correctly.	4
	■ The bowl is not properly positioned.	→ • Align the matchmarks on the bowl and main body.	5
		• Make sure the turnplate and hopper are properly positioned.	7
	■ The motor protective function is activated.	→ Turn off the appliance and allow the motor to cool.	6
The appliance stops halfway.	■ The knob is not securely tightened.	→ Tighten the knob securely.	7
	■ The cutting blade is snagged on the ice.	→ • Flip the switch to the REVERSE position.	7
		• Flip the switch to the OFF position.	7
		• After the appliance completely stops, flip the switch to the ON position.	7
	■ The batteries are exhausted.	→ Replace the batteries.	4
	■ The cutting blade is worn.	→ Replace the bowl assembly with a new one.	8
The appliance operates, but the ice is not shaved.	■ The ice is slipping.	→ Change the position of the ice by turning hopper.	5
	■ Broken pieces of ice are collected near the cutting blade.	→ Remove the ice pieces. Be careful of the cutting blade.	5

Coleman® On-The-Go-Sno™ Portable Ice Shaver
Limited 1 Year Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of one year from the date of original retail purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear of parts, parts that are not genuine Coleman® parts, or damage resulting from any of the following: negligent use or misuse of the product; use on improper voltage or current; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. Warranty void if damage to product results from the use of a part other than a genuine Coleman® part.

COLEMAN SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by UPS or Parcel Post insured with shipping and insurance prepaid to:

For products purchased in the United States:
The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219

The costs of transporting the product to Coleman or an authorized service center for warranty service is the responsibility of the purchaser.

Do not mail products with fuel in tanks, or with disposable propane cylinders. Remove glass globes from lanterns and wrap separately.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707.

© 2005 The Coleman Company, Inc. All rights reserved. Coleman®, Coleman and are registered trademarks and On-The-Go-Sno™ is a trademark of The Coleman Company, Inc.